




### UNDERGROUND DISTRIBUTION

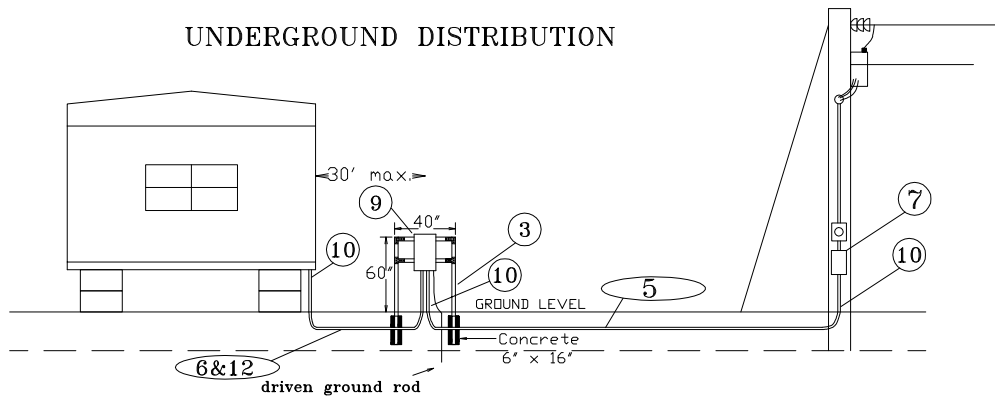


### UNDERGROUND DISTRIBUTION

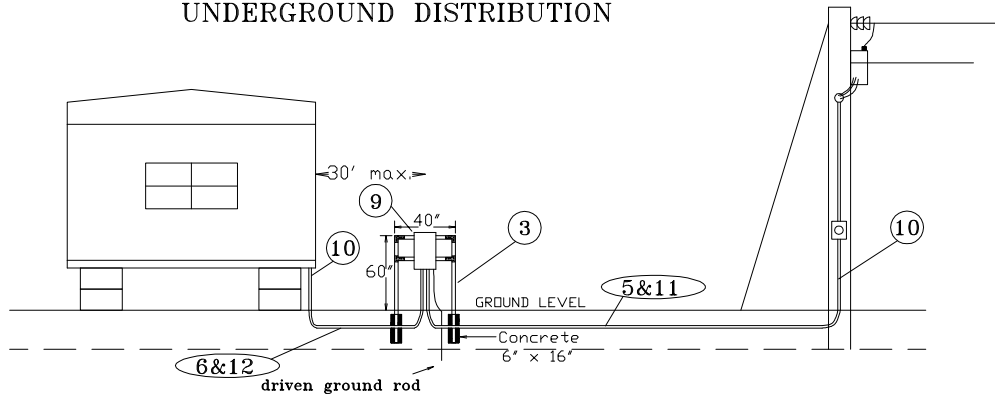

### OVERHEAD SERVICE

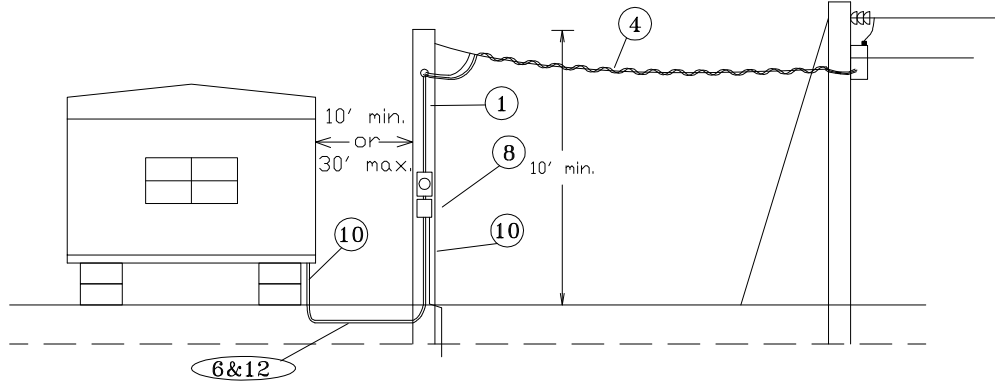

### OVERHEAD DISTRIBUTION

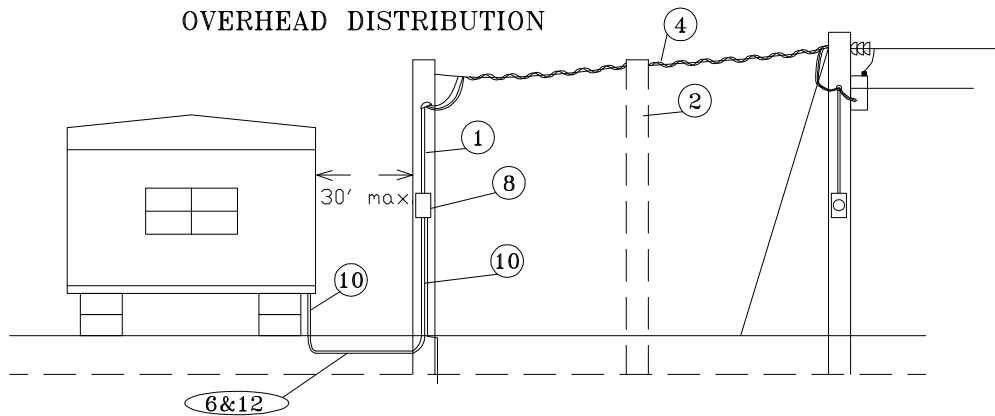

\*Disconnect means must be installed either on meter pole as shown or on first pole out from meter pole.

Rev. 1/15/09  
G:\MAPPING\SPCS\Foundation\_UG\MobileHomeGuide.dwg